

ARK 19 Mod. 2


Wiederverwendbare Abreißkupplung zur Montage an LPG-Schlauchleitungen

Die ELAFLEX **ARK** ist eine Abreißkupplung, die bei Wegfahrunfällen selbsttätig den Austritt von Flüssiggas verhindert. Sie wird als "Hose Break" zwischen dem Kurzschlauch und dem langen Zapfschlauch montiert und mit dem Zugseil an der Zapfsäule oder an einem Fixpunkt (z. B. Ramppfahl) befestigt. Die Befestigung muss für eine höhere Belastung als die maximal mögliche Trennkraft ausgelegt sein.

Jede **ARK** wird vor Auslieferung auf sichere Funktion und Druckdichtigkeit getestet. Dies wird durch das eingeprägte Prüfdatum dokumentiert.

Bei einer schlauchseitigen Zugkraft von 200 - 500 N trennt die Kupplung unabhängig vom Innendruck. Hierbei entweichen lediglich ~9 ccm Flüssiggas.

Die elastische Breaktülle BS 19 dient als Öffnungssicherung und dem Schutz des Ausreißteiles vor mechanischen Beschädigungen der Dichtflächen.

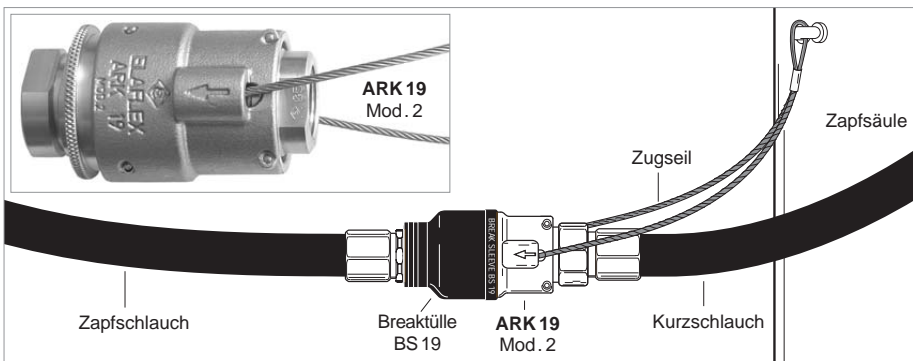

ERSTMONTAGE

Die Montage an der Zapfsäule darf nur von einem autorisierten Monteur durchgeführt werden. Es muss sichergestellt sein, dass der Kurzschlauch und das Zugseil so befestigt sind, dass in jeder möglichen Wegfahrrichtung des angeschlossenen Fahrzeuges die ARK zugbelastet ist und sie damit öffnen kann.

Breaktülle BS 19 zurückschieben. Anschliessend ARK in richtiger Einbaurichtung zwischen die Schläuche montieren. Zur Erleichterung der Montage (z.B. bei Anschluss M 30 x 1,5 L) kann die ARK durch Drücken der Schiebehülse getrennt werden.


Nach erfolgter Montage Zapfsäule einschalten, Schlauchleitung unter Druck setzen und Dichtigkeitsprüfung durchführen.

Breaktülle über die ARK schieben und sicher einschnappen lassen.

WIEDERMONTAGE NACH ABRISS

Diese Arbeit darf nur von einem autorisierten Monteur durchgeführt werden.

- (1) Zapfsäulenpumpe abstellen. Zapfsäule, Schlauchleitung und Zapfventil auf Beschädigungen untersuchen. Wiedermontage kann unter Druck erfolgen.
- (2) Breaktülle **BS 19** über Ausreißteil und Schlaucharmatur zurückschieben.
- (3) Kupplungsteile säubern. Bei Schäden (z.B. der O-Ring Dichtfläche des Ausreißteils, Deformationen, gebrochenen Kunststoffteilen, beschädigtem Zugseil) muss die ARK ausgetauscht werden.
- (4) Im Gehäuse den O-Ring dünn einfetten.
- (5) Schiebehülse im Gehäuse zurückschieben und halten.
- (6) Ausreißteil leicht in das Gehäuse einführen.
- (7) Schiebehülse loslassen - sie bleibt in der Position. Ausreißteil zügig bis zum Anschlag einstecken; die Schiebehülse schnappt nach vorn. Kupplung auf Dichtigkeit prüfen.
- (8) Breaktülle **BS 19** wieder über ARK schieben und einschnappen lassen.
- (9) Zapfsäule einschalten.

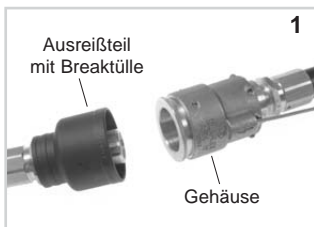

ARK 19 Mod. 2


Reusable Break-Away Coupling for Autogas Hoses

ELAFLEX ARK is a break-away coupling designed to seal off the outflow of L.P. gas in the event of a drive-off incident. As a “Hose Break” it is mounted in between the short connection hose and the long Autogas hose and fixed with the lanyard to the dispenser or to a fixing point (e.g. stanchion). The fastening shall be designed for a higher strain than the max. separation force.

Before delivery each **ARK** is tested regarding the break-off and tightness under pressure. This is documented by the factory date.

When the Autogas hose is pulled with a force of 200 - 500 N, the coupling separates, independently of the inner pressure. Integral valves on both sides immediately stop the flow; only approximately 9 ccm L.P. gas will flow out.

The flexible break sleeve BS 19 helps to avoid tampering and protects the break-away part against damage of the sealing surfaces.

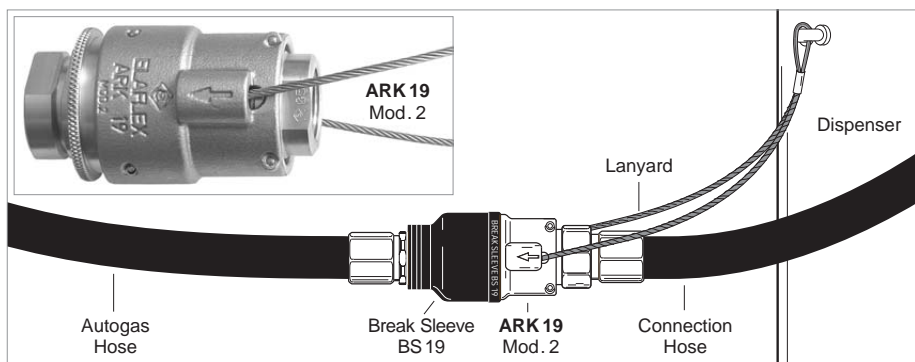

INSTALLATION INSTRUCTIONS

The assembly at the dispenser must only be done by an authorised service engineer. It must be safeguarded that the short connection hose and the lanyard are fixed in such a way that the coupling can separate in any possible drive-away direction.

Push break sleeve BS 19 back. Fasten ARK in correct assembly direction in between the hoses. To ease the assembly (e.g. for M30 x 1,5L fittings) the coupling may be separated by pushing the sliding sleeve.

After assembly switch on the pump and check the system for tightness.

Then push the break sleeve over the ARK until it latches.

REASSEMBLY AFTER SEPARATION

This work must be completed by authorised personnel.

- (1) Switch off pump. Check for damages of dispenser, hose and nozzle. The reassembly can take place under pressure.
- (2) Push break sleeve **BS 19** back over the break-away part and hose fitting.
- (3) Clean all parts and check them for damages like damaged sealing surface of the break-away part, deformations, broken plastic parts or damaged lanyard. With such damage the coupling must be exchanged.
- (4) Slightly lubricate the O-ring within the body.
- (5) Push back the sliding sleeve of the body and hold it.
- (6) Fit the break-away part into the body. No force is necessary.
- (7) Release the sliding sleeve - it remains in its position. Now push in firmly the break-away part until the limit. The sliding sleeve will snap back. Check the coupling for tightness.
- (8) Push break sleeve **BS 19** over the ARK and let it snap in.
- (9) Switch on pump.

